 


*Mike
Dove*

Union Pacific Railroad



Brazos Yard

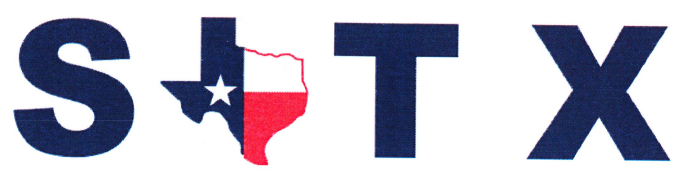

2024



General Information:

Address:

7214 Trim West RD Hearne TX, 77859
Building # BLDG-10873 Door Code: 0095

Contacts:

 
General Manager: Brian McGavock 402-671-4767
Superintendent: Danny Jaquess 210-740-7134
Senior MTO: Adolfo Contreras 325-627-5707
Senior Manager Safety: Michael Soriano 682-277-5522
MTO: Ashley Zieg 979-219-5316
MYO: On Duty: Check TSN for contact information

Radio Channels:

39-39: Dispatcher For RCO Zone status, signals around the yard, Work Events, Utility
38-38: RCO Jobs, Trim Jobs, Utility

Brazos Yard:

Pullback Zones: 103,104, and 105. **Receiving and Departure:** 351-357. **South Inbound/Outbound:** 115 and 127. **Speeds:** 127 – 10MPH 129 – 10MPH All Other Tracks – 15MPH **Securement:** 2 Handbrakes **Post Cars:** 3

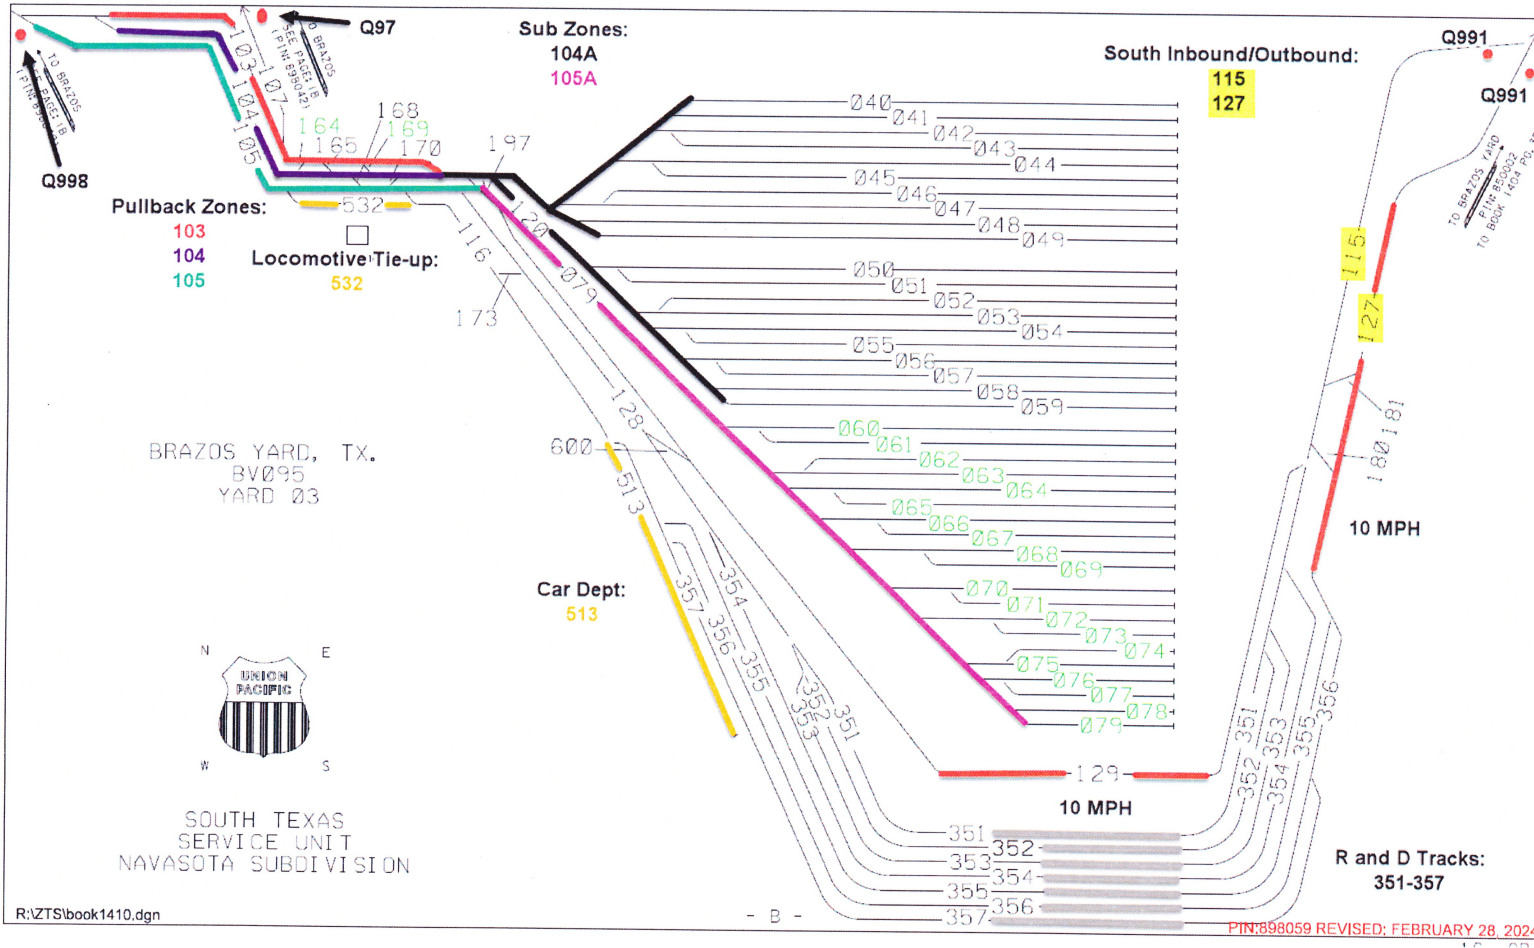

Remote Control Zones:


Before entering Brazos yard, contact the remote-control job to determine if there are active zones. If you cannot get ahold of the remote-control job, contact the 434 dispatcher on 39-39 *29. If zones are active, do not enter the yard from the north end until talking to the remote-control job currently working. From the south coming out of the 300 tracks, track 129, and track 128, talk to RCO job before fouling the 120-switch coming off track 129, 128 and track 116 connecting to track 105.

Pull back protection:

Zone 103: On track 103 from the south 103/104 switch, northward to clearance point at north 103/104 switch.

Zone 104: On track 104 from the south 103/104 switch, northward to clearance point at north 103/104 switch.

 Zone 105: On track 79 from clearance point 197 crossover switch, northward onto track 128, onto track 105 to clearance point at north 103/105 switch.

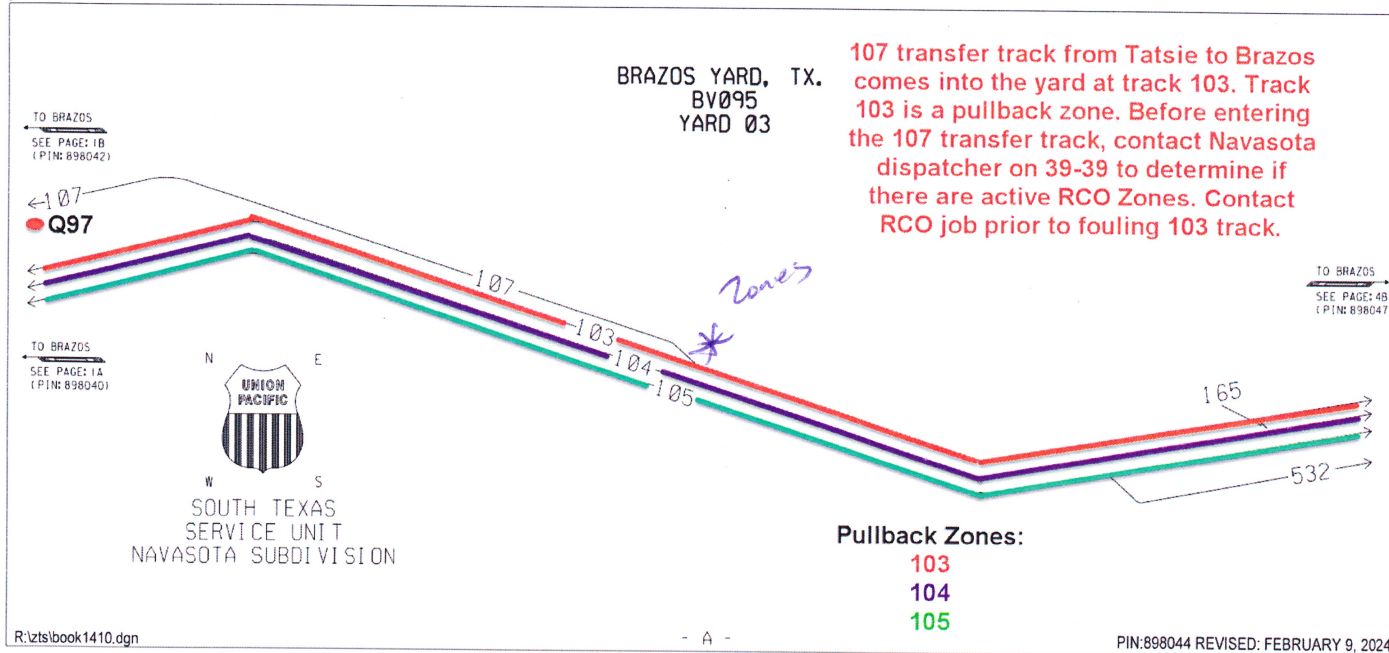



Sub Zones:

Zone 104A: Zone 104A: From north clearance point track 041, northward on track 040, including inside switches, to clearance point 040/120 switch; From north clearance point track 059, northward on track 120, including inside switches, to clearance point 040/120 switch; From 040/120 switch, northward on track 104 to south 103/104 switch.

Zone 104A must be activated in conjunction with Pullback Zone 103 or Pullback Zone 104 to be relieved of point protection during pulling movements.

When activated in conjunction with Pullback Zone 103: Zone 104A includes track 103 from south 103/104 switch northward to clearance point north switch 103/104 crossover.

When activated in conjunction with Pullback Zone 103 or Pullback Zone 104: Zone 104A includes track 104 from south 103/104 switch northward to and including south switch 103/104 crossover.


Zone 105A: From north clearance point track 079, northward on track 079, including inside switches, to clearance point 197 crossover switch. Zone 105A must be activated in conjunction with Pullback Zone 105, or Zone 104A and Pullback Zone 103 or Pullback 104 to be relieved of point protection during pulling movements.

Zone Status Contact: 434 Dispatcher 39-39 *29.



BUILDING AMERICA®

 Brazos Yard

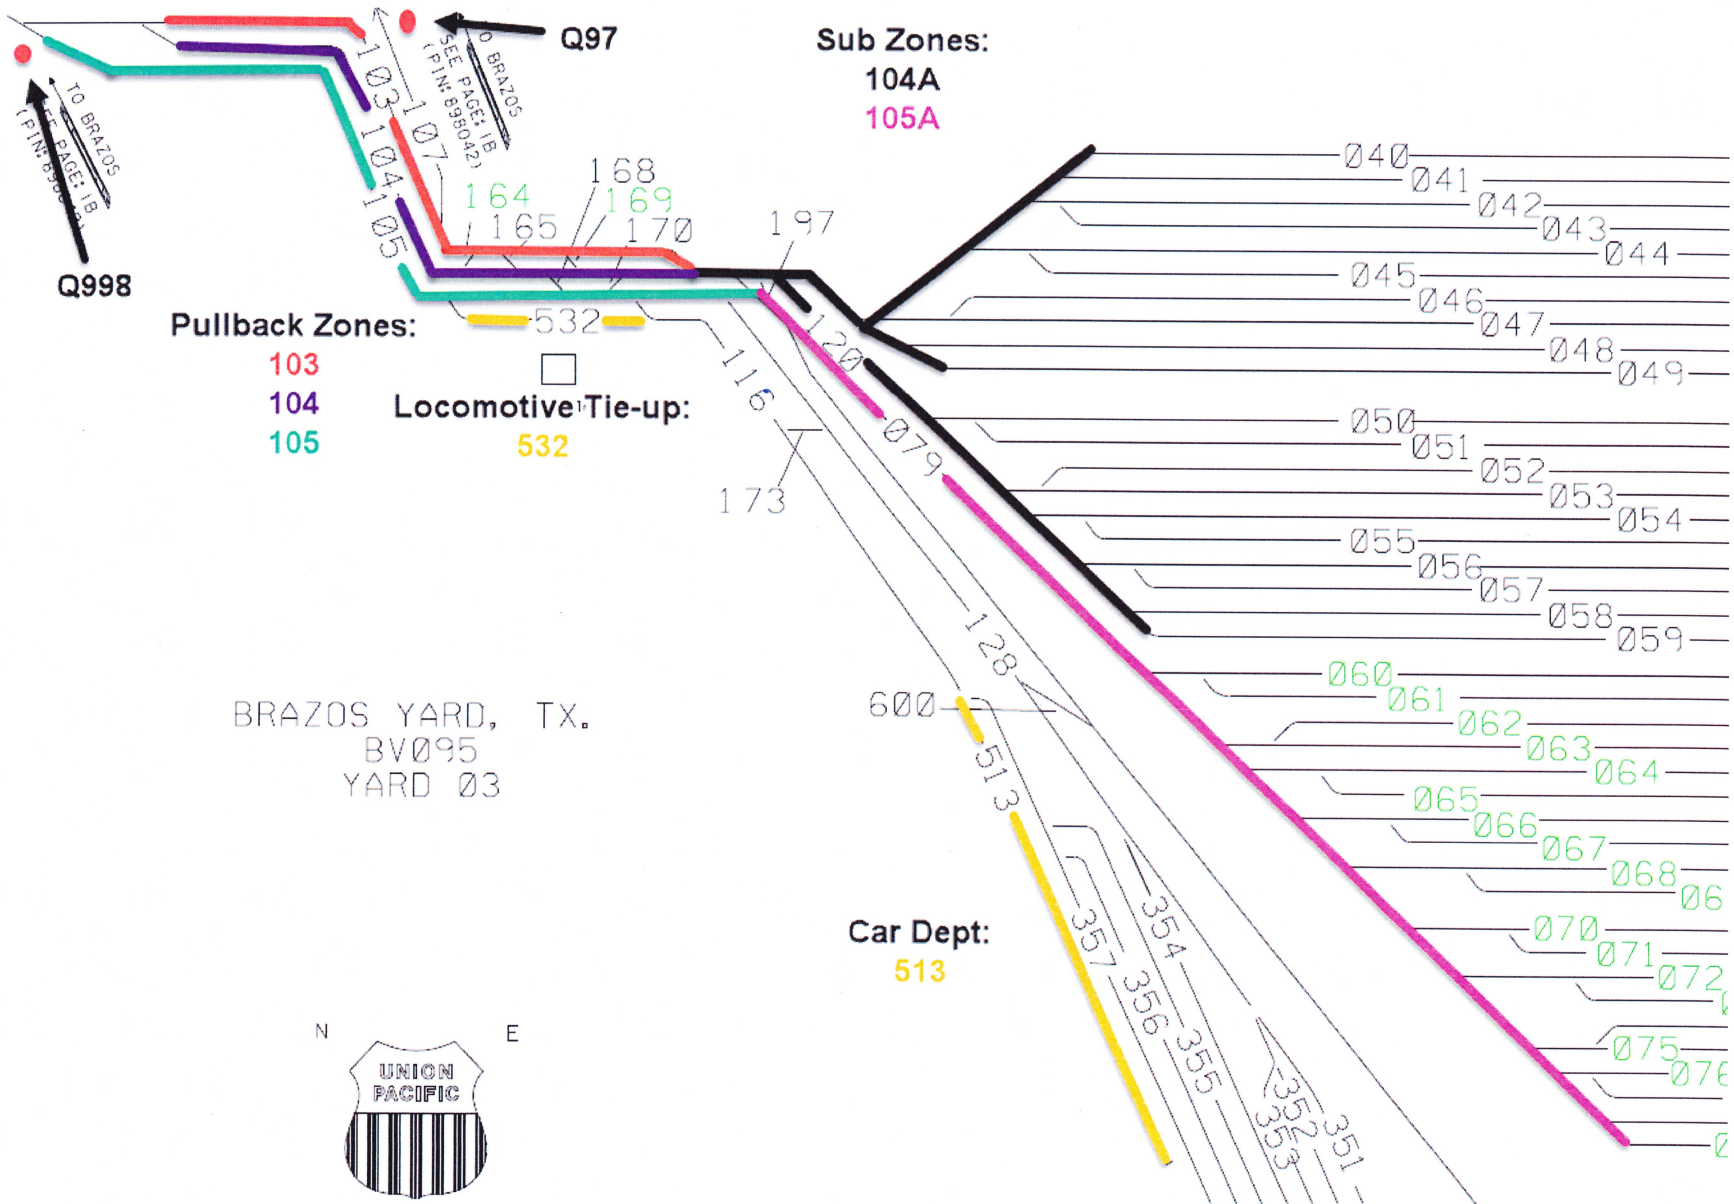

BRAZOS YARD, TX.
BV095
YARD 03

